

# FLYMASTER TRACKER



USER MANUAL V 2.01r

## 3.4 The Device



**1** POWER BUTTON

---

**2** SELECT BUTTON

---

**3** STATUS LEDS

---

**4** ON/OFF STATUS LED

---

**5** GPS STATUS LED

---

**6** GSM STATUS LED

---

**7** S.O.S. BUTTON

## 4 - Keys and leds

### 4.1 - Power on/off the Tracker

PRESS KEY **1** Then **2**

**POWER ON/OFF:** Press key 1

**CONFIRM:** Press key 2

The status led blinks in sequence indicating the remaining time to confirm in key 2



### 4.2 - Operating modes and status

Tracker is On (orange led blinks)



GPS position is fix (green led blinks)



GSM is connected (blue led blinks)



Tracker is sending pending data  
(Blue led alone blinks)



Your tracker will be ready to use only when all the 3 leds blinks in sequence.

## 4.3 - Checking Status ( TRACKER MUST BE ON )

Battery level  
Press key 2 **ONCE**.



GPS signal strength  
Press key 2 **TWICE**.



GSM signal strength  
Press key 2 **THRICE**.



Each status led corresponds at about 20% of strenght/capacity of each Flymaster Tracker feature (Battery, GPS and GSM).